



KUTERLEX AND KUTERLEX PLUS


INSTALLATION GUIDE

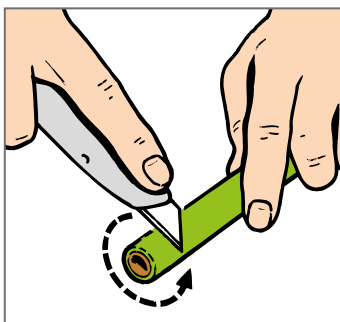


ONE
Make circular incision
in plastic cover

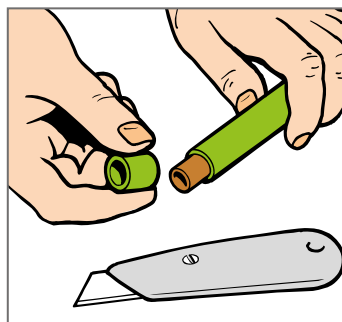


TWO
Remove the cut plastic
from the end of the tube

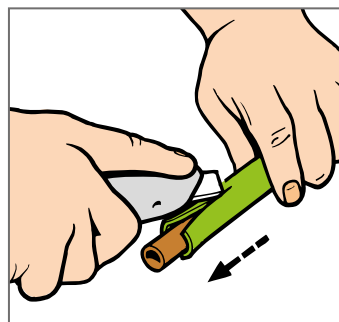


THREE
Make the incision in plastic
along tube. (Take care not to
damage copper surface)

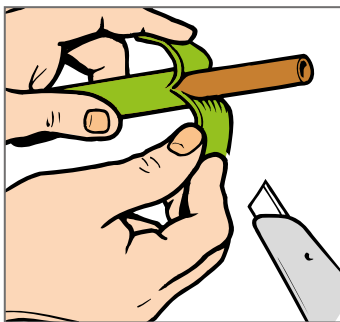


FOUR
Peel back the plastic
cover carefully

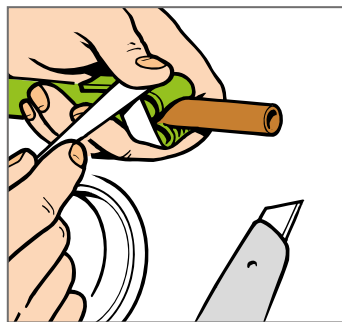


FIVE
Secure the spliced plastic
cover with tape

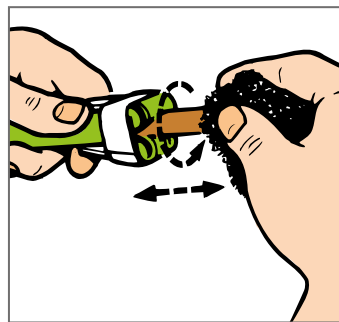

SIX
Clean tube and fitting with
a suitable abrasive pad

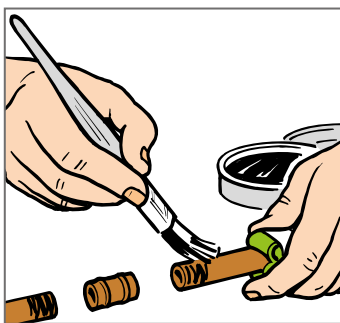


SEVEN
Apply Flux

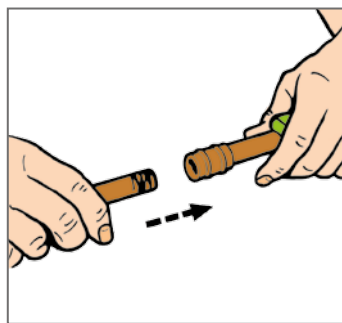

EIGHT
Connect tube and fitting




NINE
Wrap exposed plastic
with a damp cloth

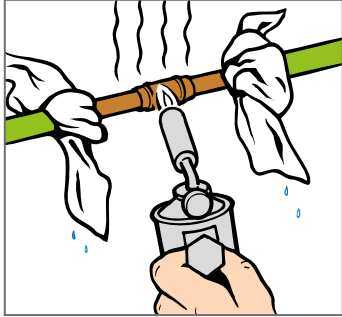


TEN
Heat with blow lamp




ELEVEN
When cooled remove damp cloth
and re-position plastic

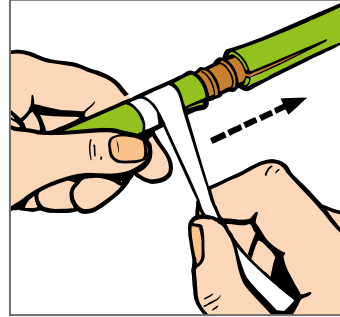

TWELVE
Secure with water proof
adhesive tape

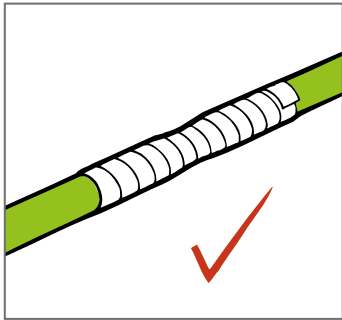

THIRTEEN
The finished joint

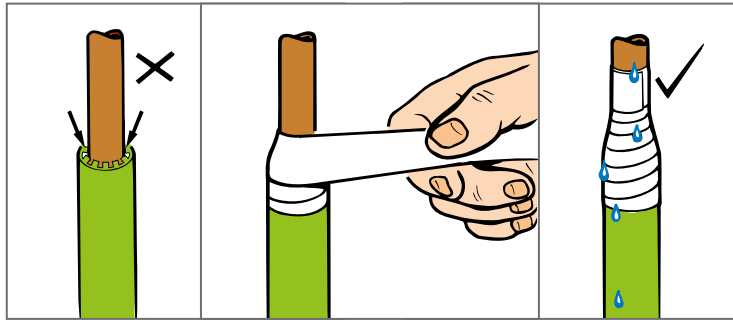

FOURTEEN
Exposed ends should be
sealed with water proof
adhesive tape

For full instructions please see Yorkshire Technical Guide.